




PulseBlaster™

PCI Board Rev. 02

Owner's Manual

Models:

PB12-50, PB12-100, PB12-100-32k

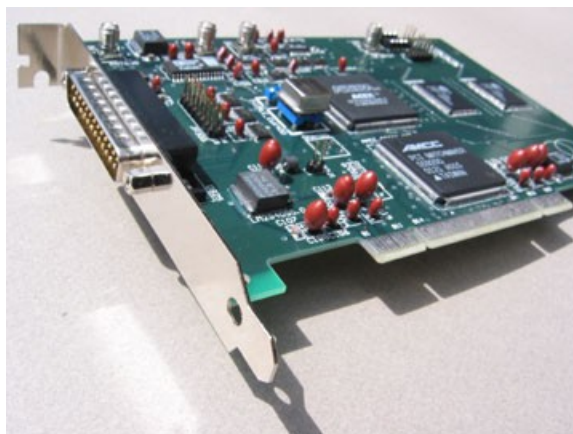

SpinCore Technologies, Inc.
<http://www.spincore.com>

**Congratulations and *thank you* for choosing a design from
SpinCore Technologies, Inc.**

We appreciate your business!

**At SpinCore we aim to fully support the needs of our customers. If you
are in need of assistance, please contact us and we will strive to provide
the necessary support.**

© 2000-2007 SpinCore Technologies, Inc. All rights reserved.

SpinCore Technologies, Inc. reserves the right to make changes to the product(s) or information herein without notice.

PulseBlasterDDS™, PulseBlaster™, SpinCore, and the SpinCore Technologies, Inc. logos are trademarks of SpinCore Technologies, Inc. All other trademarks are the property of their respective owners.

SpinCore Technologies, Inc. makes every effort to verify the correct operation of the equipment. This equipment version is not intended for use in a system in which the failure of a SpinCore device will threaten the safety of equipment or person(s).

Table of Contents

I. Introduction

.....	5
Product Overview	5
Board Architecture	6
Block Diagram	6
Output signals.....	6
Timing characteristics.....	6
Instruction set.....	7
External triggering	7
Summary.....	7
Specifications.....	7
TTL Specifications.....	7
Pulse Parameters.....	7
Pulse Program Control Flow (Common).....	7

II. Installation

.....	8
Installing the PulseBlaster Driver.....	8

III. Programming the PulseBlaster

.....	8
The PulseBlaster Interpreter.....	8

IV. Connecting to the PulseBlaster Board

.....	9
Connector Information.....	9
DB-25 - TTL Output Signal Bits.....	9
Header JP100.....	9

Appendix I: Controlling the PulseBlaster with Spinapi

.....	10
Instruction Set Architecture.....	10
Machine-Word Definition.....	10
Breakdown of 80-bit Instruction Word.....	10

PulseBlaster

Output Pattern and Control Word..... 11

Data Field and Op Code..... 11

Delay Count.....12

About Spinapi.....12

Using C Functions to Program the PulseBlaster..... 12

Example Use of C Functions..... 14

Appendix II: Sample C Program..... 15

Contact Information

..... 17

I. Introduction

Product Overview

The PulseBlaster™ device is an intelligent pulse/pattern generation unit (TTL output levels). The intelligence of the PulseBlaster comes from an imbedded microprogrammed controller core (uPC). The controller is able to execute instructions that allow it to control program flow. This means that the PulseBlaster understands Operational Control Codes, OpCodes, and will execute them much the same way as a general-purpose microprocessor does. The PulseBlaster's microcontroller is different from the general-purpose microprocessor in that it does not contain an arithmetic logic unit (ALU) and is, therefore, incapable of doing mathematical or logical calculations. However, a unique and distinguishing feature of the PulseBlaster processor is that the execution time of instructions is user programmable. This feature makes the PulseBlaster processor capable of executing complex patterns at greatly varying update rates, ranging from nanoseconds to years per single instruction, with a constant setting accuracy of just one clock period (e.g., a 10 ns setting accuracy at a 100 MHz clock frequency).

Board Architecture

Block Diagram

Figure 1 presents the general architecture of the PulseBlaster system. The major building blocks are the SRAM memory (both internal and external to the processor), the microcontroller (uPC), the integrated bus controller (IBC), the counter, and the output buffers. The entire logic design, excluding output buffers, is contained on a single silicon chip, making it a System-on-a-Chip design. User control to the system is provided through the integrated bus controlled over the PCI bus.

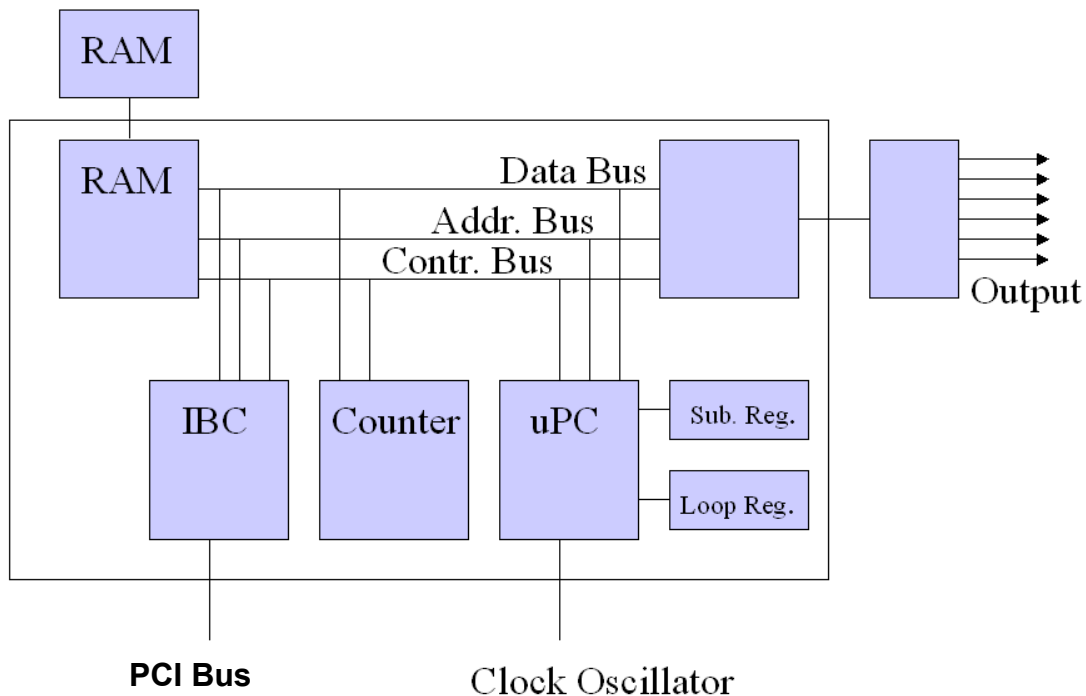


Figure 1: PulseBlaster board architecture

Output signals

The PulseBlaster comes with 12 digital output signal lines. The 12 individually controlled digital (TTL/CMOS) output bits comply with the TTL-levels' standard, and are capable of delivering ± 25 mA per bit/channel. If more output current is necessary, the individual bits/channels can be driven in parallel. The output signals are available on the PC bracket-mounted DB-25 connector.

Timing characteristics

PulseBlaster's timing controller can accept either an internal (on-board) crystal oscillator or an external frequency source of up to 125 MHz. The innovative architecture of the timing controller allows the processing of either simple timing instructions (delays of up to $2^{32} = 4,294,967,296$ clock cycles), or double-length timing instructions (up to 2^{52} clock cycles long – nearly 2 years with a 100 MHz clock!).

Regardless of the type of timing instruction, the timing resolution remains constant for any delay – just one clock period (e.g., 10 ns for a 100 MHz clock).

The core timing controller has a very short minimum delay cycle – only five clock periods for internal memory (512 words) models. This translates to a 50 ns pulse/delay/update with a 100 MHz clock. The external memory models (up to 32k words) have a nine clock-period minimum instruction cycle.

Instruction set

PulseBlaster's design features a set of commands for highly flexible program flow control. The micro-programmed controller allows for programs to include branches, subroutines, and loops at up to 8 nested levels – all this to assist the user in creating dense pulse programs that cycle through repetitious events, especially useful in numerous multidimensional spectroscopy and imaging applications.

External triggering

PulseBlaster can be triggered and/or reset externally via dedicated hardware lines. The two separate lines combine the convenience of triggering (e.g., in cardiac gating) with the safety of the "stop/reset" line. The required control signals are "active low" (or short to ground).

Summary

PulseBlaster is a versatile, high-performance pulse/pattern TTL signal generator operating at speeds of up to 125 MHz and capable of generating pulses/delays/intervals ranging from 40 ns to over 2 years per instruction. It can accommodate pulse programs with highly flexible control commands of up to 32k program words. Its high-current output logic bits are independently controlled with a voltage of 3.3 V.

Specifications

TTL Specifications

- 12 individually controlled digital output lines (TTL levels, 3.3 V logical "one")
- variable pulses/delays for every TTL line
- 25 mA output current per TTL line
- output lines can be combined to increase the max. output current

Pulse Parameters

- 50 ns shortest pulse/interval for internal memory models at 100 MHz (40 ns at 125 MHz)
- 90 ns shortest pulse/interval for external memory models at 100 MHz.
- 2 years longest pulse/interval
- 10 ns pulse/interval resolution (8 ns for internal-memory models at 125 MHz)
- 32k instructions max. memory space (512 instructions for internal memory models)
- external triggering and reset – TTL levels

Pulse Program Control Flow (Common)

- loops, nested 8 levels deep
- 20 bit loop counters (max. 1,048,576 repetitions)
- subroutines, nested 8 levels deep
- wait for trigger – 8 clock cycle latency (80ns at 100 MHz), adjustable to 2 years in duration
- 5 MHz max. re-triggering frequency

II. Installation

Installing the PulseBlaster Driver

The PulseBlaster uses the Spinapi driver and control library. The latest version of this driver can be downloaded from: <http://www.spincore.com/CD/spinapi/> . This URL contains both the driver as well as the most recent installation guide. Please refer to that document for instructions on how to properly install the drivers.

III. Programming the PulseBlaster

The PulseBlaster Interpreter

The PulseBlaster board is now programmable via the *PulseBlaster Interpreter*, which is a free programming utility provided by SpinCore for writing pulse programs. This easy-to-use editor allows you to create, edit, save and run your pulse sequence.

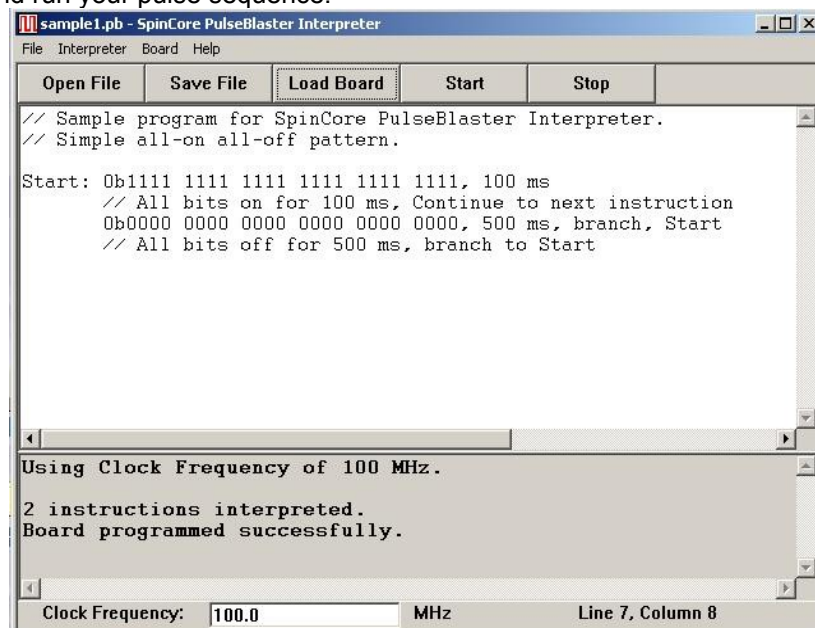


Figure 2: The PulseBlaster Interpreter's GUI

Please follow the link below for the most recent installation instructions and documentation:

<http://www.spincore.com/support/>

It is also possible to write pulse programs and control the PulseBlaster with C functions. For more information on this, please see Appendix I.

IV. Connecting to the PulseBlaster Board

Connector Information

DB-25 - TTL Output Signal Bits

Outputs TTL signals generated by the user's Program. Please consult the table below for bit assignments.

Pin Assignments			
Pin#	Bit#	Pin#	Bit#
1	GND	14	GND
2	Reserved	15	Reserved
3	GND	16	Reserved
4	Reserved	17	GND
5	11	18	10
6	GND	19	9
7	8	20	GND
8	7	21	6
9	GND	22	5
10	4	23	GND
11	3	24	2
12	GND	25	1
13	0		

Table 3: Output bits and signals of the PulseBlaster

Header JP100

This is an input connector, for hardware triggering (HW_Trigger) and resetting (HW_Reset).

HW_Trigger is pulled high by default, and pin 1 is active (pin 2 = GND). When a falling edge is detected (e.g., when shorting pins 1-2), it initiates code execution. This trigger will also restart execution of a program from the beginning of the code if it is detected after the design has reached an idle state. The idle state could have been created either by reaching the STOP Op Code of a program, or by the detection of the HW_Reset signal. When the WAIT Op Code is used in the pulse program, the HW_Trigger will cause the program to continue to the next instruction.

HW_Reset is pulled high by default, and pin 3 is active (pin 4 = GND). It can be used to halt the execution of a program by pulling it low (e.g., by shorting pins 3-4). When the signal is pulled low during the execution of a program, the controller resets itself back to the beginning of the program. Program execution can be resumed by either a software start command or by a hardware trigger.

Appendix I: Controlling the PulseBlaster with Spinapi

Instruction Set Architecture

Machine-Word Definition

The PulseBlaster pulse timing and control processor implements an 80-bit wide Very Long Instruction Word (VLIW) architecture. The VLIW memory words have specific bits/fields dedicated to specific purposes, and every word should be viewed as a single instruction of the micro-controller. The maximum number of instructions that can be loaded to on-board memory is 32k. The execution time of instructions can be varied and is under (self) control by one of the fields of the instruction word – the shortest being five clock cycles (for 512 memory-word models) and the longest being 2^{52} clock cycles. All instructions have the same format and bit length, and all bit fields have to be filled. Figure 2 shows the fields and bit definitions of the 80-bit instruction word.

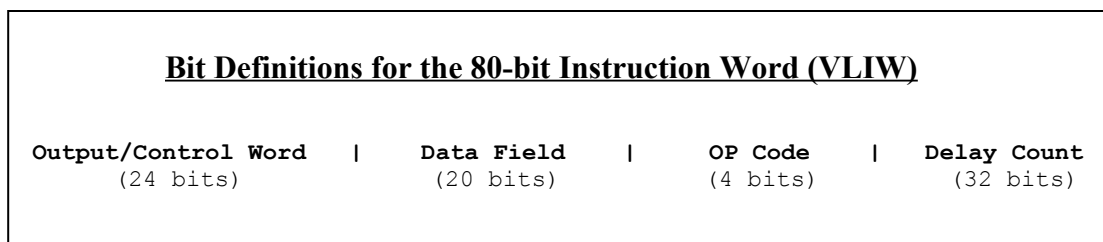


Figure 2: Bit definitions of the 80-bit instruction/memory word

Breakdown of 80-bit Instruction Word

The 80-bit VLIW is broken up into 4 sections

1. Output Pattern and Control Word - 24 bits
2. Data Field - 20 bits
3. OP Code - 4 bits
4. Delay Count - 32 bits

Output Pattern and Control Word

Please refer to Table 1 for output pattern and control bit assignments of the 24-bit output/control word.

Bit #		Bit #	Function
23	Reserved	11	Output Connector DB25 pin 5
22	Reserved	10	Output Connector DB25 pin 18
21	Reserved	9	Output Connector DB25 pin 19
20	Reserved	8	Output Connector DB25 pin 7
19	Reserved	7	Output Connector DB25 pin 8
18	Reserved	6	Output Connector DB25 pin 21
17	Reserved	5	Output Connector DB25 pin 22
16	Reserved	4	Output Connector DB25 pin 10
15	Reserved	3	Output Connector DB25 pin 11
14	Reserved	2	Output Connector DB25 pin 24
13	Reserved	1	Output Connector DB25 pin 25
12	Reserved	0	Output Connector DB25 pin 13

Table 1: Output Pattern and Control Word Bits

Data Field and Op Code

Please refer to Table 2 for information on the available operational codes (OpCode) and the associated data field functions (the data field's function is dependent on the Op Code)

Op Code #	Inst	Inst_data	Function
0	CONTINUE	Ignored	Program execution continues to next instruction
1	STOP	Ignored	Stop execution of program (*Note all TTL values remain from previous instruction, and analog outputs turn off)
2	LOOP	Number of desired loops. This value must be greater than or equal to 1.	Specify beginning of a loop. Execution continues to next instruction. Data used to specify number of loops
3	END_LOOP	Address of beginning of loop	Specify end of a loop. Execution returns to begging of loop and decrements loop counter.
4	JSR	Address of first subroutine instruction	Program execution jumps to beginning of a subroutine
5	RTS	Ignored	Program execution returns to instruction after JSR was called
6	BRANCH	Address of next instruction	Program execution continues at specified instruction
7	LONG_DELAY	Number of desired loops. This value must be greater than or equal to 2.	For long interval instructions. Data field specifies a multiplier of the delay field. Execution continues to next instruction
8	WAIT	Ignored	Program execution stops and waits for software or hardware trigger. Execution continues to next instruction after receipt of trigger. The latency is equal to the delay value entered in the WAIT instruction line plus a fixed delay of 6 clock cycles.

Table 2: Op Code and Data Field Description

Delay Count

The value of the Delay Count field (a 32-bit value) determines how long the current instruction should be executed. The allowed minimum value of this field is 0x6 for the 32k memory models and 0x2 for the internal-memory models. The timing controller has a fixed delay of three clock cycles and the value that one enters into the Delay Count field should account for this inherent delay.

About Spinapi

Spinapi is a control library which allows programs to be written to communicate with the PulseBlaster board. The most straightforward way to interface with this library is with a C/C++ program, and the API definitions are described in this context. However, virtually all programming languages and software environments (including software such as LabView and Matlab) provide mechanisms for accessing the functionality of standard libraries such as Spinapi.

Please see the example programs included with Spinapi for an explanation of how to use Spinapi. A reference document for the API is available online at:

http://www.spincore.com/CD/spinapi/spinapi_reference/

Using C Functions to Program the PulseBlaster

A series of functions have been written to control the board and facilitate the construction of pulse program instructions.

In order to use these functions, the DLL (spinapi.dll), the library file (libspinapi.a for mingw, spinapilibgcc for borland, and spinapi.lib for msvc), the header file (spinapi.h), must be in the working directory of your C compiler¹.

```
int pb_init();
```

Initializes PulseBlaster board. Needs to be called before calling any functions using the PulseBlaster. Returns a negative number on an error or 0 on success.

```
int pb_close();
```

Releases PulseBlaster board. Needs to be called as last command in pulse program. Returns a negative number on an error or 0 on success.

```
void set_clock(double clock_freq);
```

Used to set the clock frequency of the board. The variable **clock_frequency** is specified in MHz when no units are entered. Valid units are MHz, kHz, and Hz. The default clock value is 50MHz. You only need to call this function if you are not using a -50 board.

```
int start_programming(int device);
```

Used to initialize the system to receive programming information. It accepts a parameter referencing the target for the instructions. The only valid value for **device** is PULSE_PROGRAM, It returns a 0 on success or a negative number on an error.

¹ These functions and library files have been generated and tested with MinGW (www.mingw.com), Borland 5.5 (www.borland.com), MS Visual Studio 2003 (msdn.microsoft.com) compilers.

```
int pb_inst(int flags, int inst, int inst_data, double length);
```

Used to send one instruction of the pulse program. Should only be called after `start_programming(PULSE_PROGRAM)` has been called. It returns a negative number on an error, or the instruction number upon success. If the function returns -99, an invalid parameter was passed to the function. Instructions are numbered starting at 0.

int flags – determines state of each TTL output bit. Valid values are 0x0 to 0x3FF. For example, 0x010 would correspond to bit 7 being on, and all other bits being off.

int inst – determines which type of instruction is to be executed. Please see Table 2 for details.

int inst_data – data to be used with the previous `inst` field. Please see Table 2 for details.

int length – duration of this pulse program instruction, specified in ns.

```
int stop_programming();
```

Used to tell that programming the board is complete. Board execution cannot start until this command is received. It returns a 0 on success or a negative number on an error.

```
int pb_start();
```

Once board has been programmed, this instruction will start execution of pulse program. It returns a 0 on success or a negative number on an error.

```
int pb_stop();
```

Stops output of board. Analog output will return to ground, and TTL outputs will remain in the state they were in when stop command was received. It returns a 0 on success or a negative number on an error.

Example Use of C Functions

```
/*
 * PulseBlaster example 1
 * This program will cause the outputs to turn on and off with a period
 * of 400ms
 */

#include <stdio.h>
#define PB24
#include "spinapi.h"

int main(){

    int start, status;

    printf ("Using spinapi library version %s\n", pb_get_version());

    if(pb_init() != 0) {
        printf ("Error initializing board: %s\n", pb_get_error());
        return -1;
    }

    // Tell the driver what clock frequency the board has (in MHz)
    pb_set_clock(100.0);

    pb_start_programming(PULSE_PROGRAM);

    // Instruction 0 - Continue to instruction 1 in 100ms
    // Flags = 0xFFFFFFFF, OPCODE = CONTINUE
    start = pb_inst(0xFFFFFFFF, CONTINUE, 0, 200.0*ms);

    // Instruction 1 - Continue to instruction 2 in 100ms
    // Flags = 0x0, OPCODE = CONTINUE
    pb_inst(0x0, CONTINUE, 0, 100.0*ms);

    // Instruction 2 - Branch to "start" (Instruction 0) in 100ms
    // 0x0, OPCODE = BRANCH, Target = start
    pb_inst(0x0, BRANCH, start, 100.0*ms);

    pb_stop_programming();

    // Trigger the pulse program
    pb_start();

    //Read the status register
    status = pb_read_status();
    printf("status: %d", status);

    pb_close();

    return 0;
}
```

A more complex program using C Functions is provided in Appendix II.

Appendix II: Sample C Program

A more complex program using C Functions is provided below.

```

/*
 * PulseBlaster example 2
 * This example makes use of all instructions (except WAIT).
 */
#include <stdio.h>
#define PB24
#include <spinapi.h>

int main(int argc, char **argv){
    int start, loop, sub;
    int status;

    printf ("Using spinapi library version %s\n", pb_get_version());
    if(pb_init() != 0) {
        printf ("Error initializing board: %s\n", pb_get_error());
        return -1;
    }

    // Tell the driver what clock frequency the board has (in MHz)
    pb_set_clock(100.0);

    pb_start_programming(PULSE_PROGRAM);

    // Since we are going to jump forward in our program, we need to
    // define this variable by hand.  Instructions start at 0 and count up
    sub = 5;

    // Instruction format
    // int pb_inst(int flags, int inst, int inst_data, int length)

    // Instruction 0 - Jump to Subroutine at Instruction 4 in 1s
    start = pb_inst(0xFFFFFFFF,JSR, sub, 1000.0 * ms);

    // Loop. Instructions 1 and 2 will be repeated 3 times
    // Instruction 1 - Beginning of Loop (Loop 3 times). Continue to next //
instruction in 1s
    loop = pb_inst(0x0,LOOP,3,150.0 * ms);

    // Instruction 2 - End of Loop. Return to beginning of loop or
    // continue to next instruction in .5 s
    pb_inst(0xFFFFFFFF,END_LOOP,loop,150.0 * ms);

    // Instruction 3 - Stay here for (5*100ms) then continue to Instruction
    // 4
    pb_inst(0x0,LONG_DELAY,5, 100.0 * ms);

    // Instruction 4 - Branch to "start" (Instruction 0) in 1 s
    pb_inst(0x0,BRANCH,start,1000.0*ms);

    // Subroutine
    // Instruction 5 - Continue to next instruction in 1 * s

```

```
pb_inst(0x0,CONTINUE,0,500.0*ms);

// Instruction 6 - Return from Subroutine to Instruction 1 in .5*s
pb_inst(0xF0F0F0,RTS,0,500.0*ms);

// End of pulse program
pb_stop_programming();

// Trigger the pulse program
pb_start();

//Read the status register
status = pb_read_status();
printf("status = %d", status);

pb_close();

return 0;
}
```


Contact Information

Phone (USA): (352) 271-7383

Web Contact Form: <http://www.spincore.com/>