



Custom Low EMI PulseBlasterUSB™

Addendum to PulseBlasterUSB™ Manual



SpinCore Technologies, Inc.
<http://www.spincore.com>

Custom Low EMI PulseBlasterUSB™

**Congratulations and *thank you* for choosing a design from
SpinCore Technologies, Inc.**

We appreciate your business!

**At SpinCore we try to fully support the needs of our customers. If you
are in need of assistance, please contact us and we will strive to provide
the necessary support.**

© 2010 SpinCore Technologies, Inc. All rights reserved.

SpinCore Technologies, Inc. reserves the right to make changes to the product(s) or information herein without notice. RadioProcessor™, PulseBlaster™, SpinCore, and the SpinCore Technologies, Inc. logos are trademarks of SpinCore Technologies, Inc. All other trademarks are the property of their respective owners.

SpinCore Technologies, Inc. makes every effort to verify the correct operation of the equipment. This equipment version is not intended for use in a system in which the failure of a SpinCore device will threaten the safety of equipment or person(s).

Table of Contents

Table of Contents	3
I. Low EMI PulseBlasterUSB™	4
1. Overview.....	4
2. Connector Information.....	4
3. Operation Instructions.....	5
II. Contact Information.....	6
III. Document Information.....	6

I. Low EMI PulseBlasterUSB™

1. Overview

The Custom Low EMI PulseBlasterUSB™ is a low Electromagnetic Interference (EMI) version of our standard PulseBlasterUSB™ portable system. It measures 8" x 8.38" x 5.19" (20.32cm x 21.27cm x 13.18cm) and weighs 6.3 lbs (2.86 kg). The low EMI version includes the following features:

- 1.High performance, filtered AC power entry module.
- 2.Low-noise 3 A linear power supply.
- 3.Custom enclosure with enhanced shielding
- 4.TNC connectors for each output channel.
- 5.External clock input (1kHz to 50MHz).
- 6.Slowed slew rate of the output pulses.
- 7.Reduced 12 mA output current per channel.
- 8.8 Programmable Digital Output Bits (20ns resolution @ 50 MHz).
- 9.Automatic USB communication shutdown at frequencies lower than 50 MHz

2. Connector Information

This enclosure provides 8 output bits through TNC connectors, arranged as in Figure 1, below. There is also an external clock signal input provided through a TNC connector. This clock line is terminated with a 50Ω resistor.

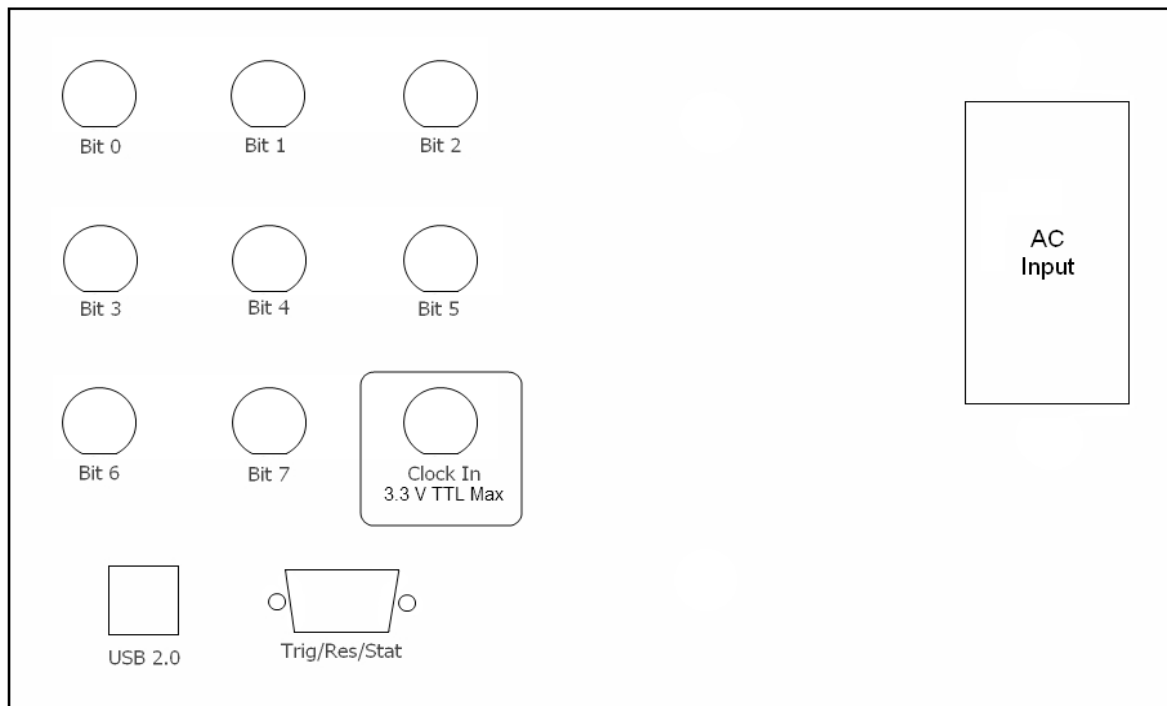


Figure 1: Front Panel Connectors

Custom Low EMI PulseBlasterUSB™

The Trig/Res/Stat DB9 connector information is shown in Figure 2 and Table 1, below. The Hardware Trigger and Hardware Reset are both active low, so each of these pins would need to be shorted to ground to cause a trigger or reset, respectively.

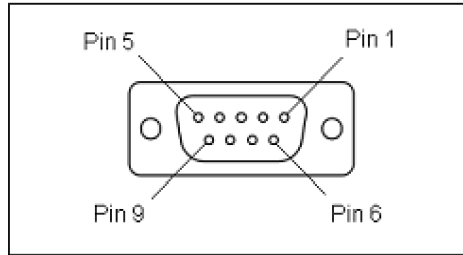


Figure 2: Trig/Res/Stat Female DB9 connector drawing

Pin number	Function
1	Hardware Trigger
2	Hardware Reset
3	WAITING
4	RUNNING
5	RESET
6	Ground
7	Ground
8	Ground
9	STOPPED

Table 1: Trig/Res/Stat Female DB9 connector pin assignments

3. Operation Instructions

Because this custom device needs to be able to operate at external clock frequencies down to 1 kHz, there are instructions that you must follow in programming the device to output your desired pulse sequence. Keep in mind that it is imperative that the clock input is 50MHz during programming.

1. Before you plug in the device, go to <http://www.spincore.com/support/spinapi> and install the latest version of our SpinAPI Driver Package.
2. Plug in your 50 MHz clock signal into 'Clock Input' TNC connector. **The clock input line is terminated with a 50Ω resistor, so you will need to use a 50Ω clock source. Also, the maximum clock signal that the system can accept is 3.3V TTL.** The minimum clock signal that the system can accept is 1.7V TTL.
3. Plug in USB cable into system and computer.
4. Insert power cord and turn on the power switch on the enclosure.
5. To use the system, program the device with whatever pulse program you choose. See the note below about how to program the device. **Make sure your clock input is 50 MHz during programming.**
6. After programming, you may dial down 50 MHz signal to frequency of your choice, e.g. 1 kHz.
7. To reprogram with different pulse sequence, you need to change your clock source back to 50 MHz.

Note: Hardware trigger and reset do work at any frequency in the range (1 kHz - 50 MHz)

Please refer to PulseBlasterUSB manual for instructions on programming your device. The address for that manual is http://www.spincore.com/CD/PulseBlasterUSB/v2/PulseBlasterUSB_v2_Manual.pdf

II. Contact Information

SpinCore Technologies, Inc.
4631 NW 53rd Avenue, SUITE 103
Gainesville, Florida 32653
USA

Telephone: +1-352-271-7383
Fax: +1-352-371-8679

Web: <http://www.spincore.com/>

III. Document Information

Document Title:	Custom Low EMI PulseBlasterUSB Manual Addendum
Document Number:	DA-140

For more information on revision history please contact SpinCore Technologies, Inc., at the address above.